



IMPORTANT: always disable the internal pullups of the ATMEGA328p in your code. If you don't do this you may FRY your sensors.